


Freeze Sensor

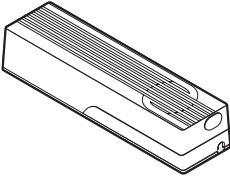

- 1 Remove the Velcro or sticky tape backing.
- 2 Mount the sensor on an interior wall, in an area that is likely to get cold first.

- » Do not mount the sensor near the furnace or water heater, as these areas stay warmer longer.
- » Do not mount on an exterior (outside) wall or the basement floor.

